

Wood Burning (Pyrography)

Wood sticks or
wood pegs


Pyrography tool
Stand

Get all your tools ready.



Plug in the hot pyrography tool and wait for it to heat up.

BE CAREFUL

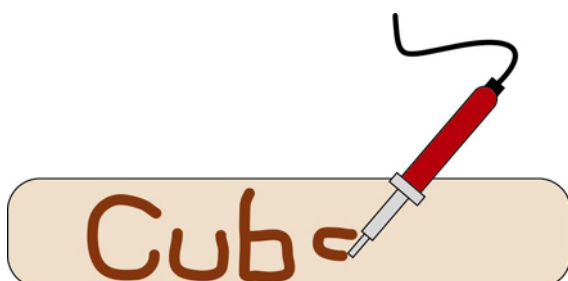

Carefully put the tool onto the wood and press lightly.

Where the hot tool touches the wood it will leave a burn mark.

CAUTION – HOT TOOL

Please keep your hand on the plastic handle of the tool

Do not touch any of the metal parts

If you get a burn - Immerse your hand in cold water and seek assistance.